Serial No.: 10/616,030

Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer





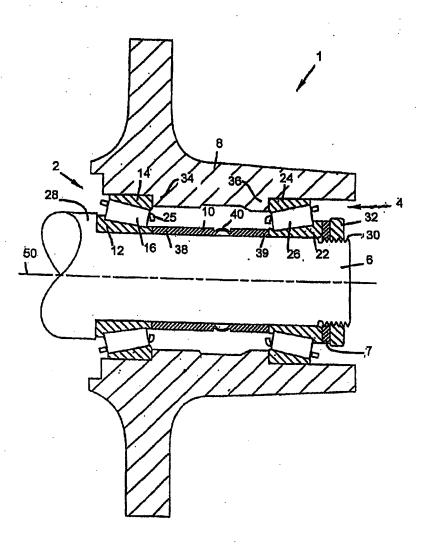



FIG. 1

PRIOR ART

Serial No.: 10/616,030

Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

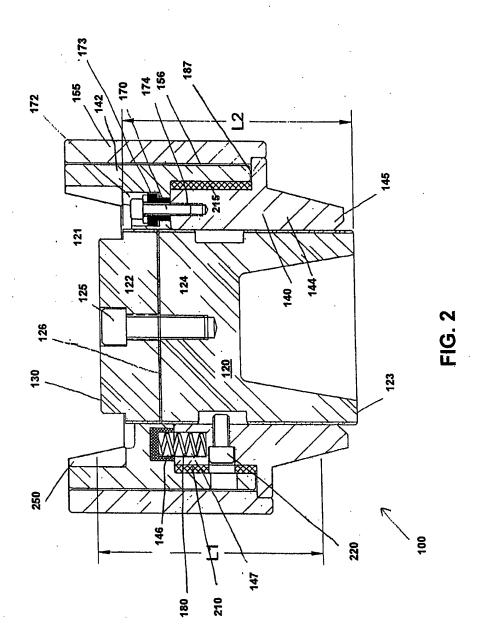

Serial No.: 10/616,030

Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

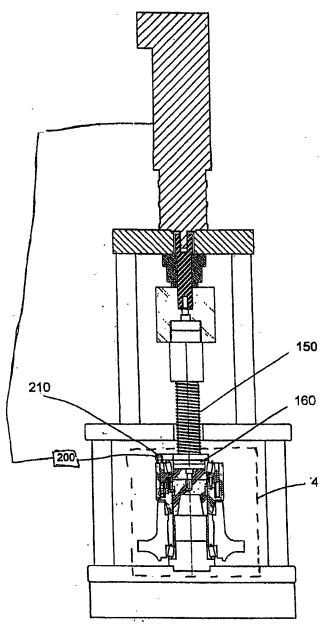


FIG. 3

Serial No.: 10/616,030 Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

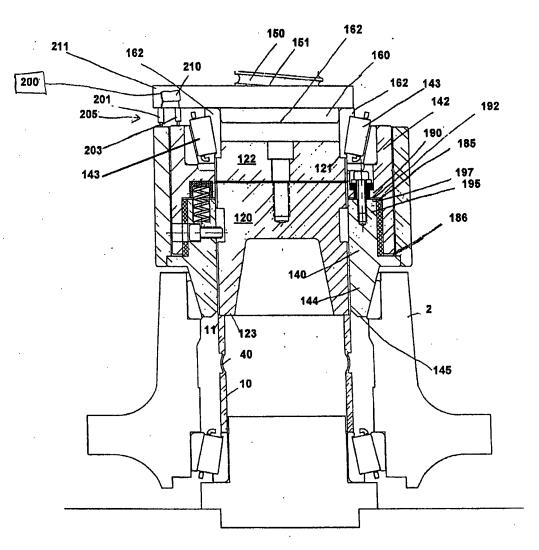


FIG. 4

Serial No.: 10/616,030 Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

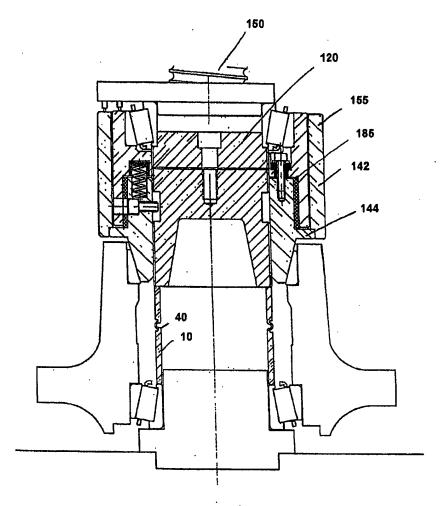


FIG. 5

Serial No.: 10/616,030 Docket No.: 0545.033

Title: Bearing Assembly Spacer Adjustment System and Method for Adjusting a Spacer

